

BitifEye License Manager

User Guide



BitifEye Digital Test Solutions GmbH
Herrenberger Strasse 130
71034 Boeblingen, Germany

info@bitifeye.com
www.bitifeye.com

Notices

© BitifEye Digital Test Solutions GmbH 2020.

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from BitifEye.

Edition

August 30, 2020

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, BitifEye disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. BitifEye shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should BitifEye and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to BitifEye’s standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Contents

1. Introduction.....	5
<u>Overview.....</u>	<u>5</u>
2. Registration.....	6
3. Navigating the License Manager.....	8
<u>Certificate Numbers.....</u>	<u>8</u>
<u>Products.....</u>	<u>9</u>
<u>Computers.....</u>	<u>9</u>
<u>Auto Update.....</u>	<u>10</u>
4. Main License Tasks.....	11
<u>Add New Certificate Number.....</u>	<u>11</u>
<u>License Activation.....</u>	<u>11</u>
<u>Direct License Transfer.....</u>	<u>12</u>
<u>File-based License Transfer.....</u>	<u>13</u>
<u>License Transfer.....</u>	<u>19</u>
<u>Direct License Transfer.....</u>	<u>19</u>
<u>File-based License Transfer.....</u>	<u>21</u>
5. Additional License Tools.....	25
<u>CodeMeter Control Center.....</u>	<u>25</u>
6. Downloading and Installing the Software.....	26
<u>Download the Software.....</u>	<u>26</u>
<u>Install the Software.....</u>	<u>27</u>

List of Figures

Figure 1: Welcome to BitifEye License Manager.....	6
Figure 2: Create user account (I).....	6
Figure 3: Certificate Number.....	7
Figure 4: Create user account (II).....	7
Figure 5: Certificate Numbers section.....	8
Figure 6: License Information.....	9
Figure 7: My Products section.....	9
Figure 8: My Containers section.....	10
Figure 9: Add New Certificate Number.....	11
Figure 10: License Activation - Direct License Transfer – (I).....	12
Figure 11: License Activation - Direct License Transfer – (II).....	12
Figure 12: License Activation - Direct License Transfer – (III).....	13
Figure 13: License Activation – File-based License Transfer – (I).....	13
Figure 14: License Activation - File-based License Transfer – (II).....	14
Figure 15: License Activation - File-based License Transfer – (III).....	14
Figure 16: License Containers for N5990A and N5991.....	15
Figure 17: License Update.....	15
Figure 18: Create license request.....	16
Figure 19: License Activation - File-based License Transfer – (IV).....	17
Figure 20: License Activation - File-based License Transfer – (V).....	17
Figure 21: Import license update.....	18
Figure 22: Create receipt.....	18
Figure 23: License Activation - File-based License Transfer – (VI).....	19
Figure 24: Re-Host License - Direct License Transfer – (I).....	20
Figure 25: Re-Host License - Direct License Transfer – (II).....	20
Figure 26: Re-Host License - Direct License Transfer – (III).....	20
Figure 27: Re-Host License - File-based License Transfer – (I).....	21
Figure 28: Re-Host License - File-based License Transfer – (II).....	21
Figure 29: Re-Host License - File-based License Transfer – (III).....	22
Figure 30: Re-Host License - File-based License Transfer – (IV).....	23
Figure 31: Re-Host License - File-based License Transfer – (V).....	23
Figure 32: Re-Host License - File-based License Transfer – (VI).....	24
Figure 33: Download the software.....	26
Figure 34: Installer Welcome Setup Window.....	27
Figure 35: Installer License Agreement Window.....	27
Figure 36: Installer Choose Components Window.....	28
Figure 37: Installer Choose Location Window.....	28

1. Introduction

Overview

The BitifEye License Manager allows users to manage the licenses for the N5990A and N5991 Test Automation software. It can be reached at <https://licensing.bitifeye.com/>

The BitifEye License Manager (BLM) provides the following features:

- Activation of your acquired license (online or offline)
- Overview of all acquired licenses for the specific user
- Overview of which licenses are in use and which are still available
- For transportable licenses, the ability to transfer licenses from one computer to another

This guide describes how to use the license manager.

2. Registration

To access the BitfiEye License Manager, it is necessary to be a registered user. To register, go to licensing portal at <https://licensing.bitifeye.com/> and carry out the following steps:

1. Click on **Create new user account**.

Figure 1: Welcome to BitifEye License Manager

2. Accept the Privacy Policy and fill in all the registration fields.

Figure 2: Create user account (I)

In the Certificate Number field you must enter a valid BitifEye certificate number. The certificate number can be found on the BitifEye License Redemption Document:



Order Number:		
Certificate Number: XXXX-XXXX-XXXX-XXXX-XXXX		
Customer:		
End customer:		
Product Key for BitifEye Test Software		
This certificate is proof of ownership of the software product(s) listed below. Please keep this certificate for your records.		
Product	Description	Quantity

Figure 3: Certificate Number

3. Click on **Register now**.
4. When all the entered information has been verified, you will receive an email with an activation link. Please click on that link to activate your account.
5. After activating the account, click on **Login** (see Figure Figure 4).

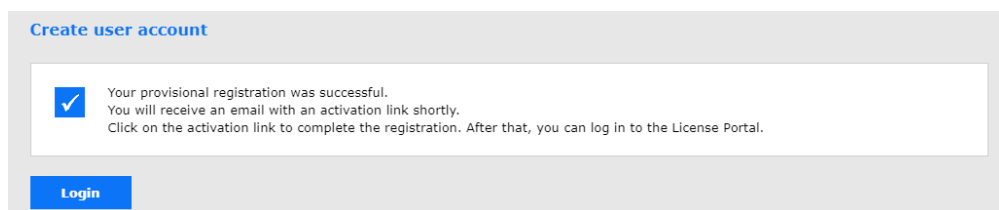


Figure 4: Create user account (II)

6. You will be redirected to the Login page. Enter your credentials here and you will have access to the License Manager.

NOTE: This registration process only needs to be done once. Once you are registered, to add more certificate numbers follow the steps described in Add New Certificate Number.

3. Navigating the License Manager

Certificate Numbers

The My Certificate Numbers view shows you the list of certificates available on your account (see Figure 5).

My Certificate Numbers

Here you can add more Certificate Numbers to your account.

+	Certificate Number	Available	Purchased On
+	984X-2C7Q7-6L5L-2H8F-3D49E	0 (4)	03Jul2020
+	42NF-1K298-8EAD9-3F13N-76L7J	0 (2)	03Jun2020
+	3H5Q-8V9G5-2HVC-028T-6B4J7	0 (1)	14May2020
+	4H7H-5K3A-832N-4K88E-3F4G	0 (1)	28Apr2020
+	8K6S-3H9Q-8V9N-03FF-087F	1 (1)	24Apr2020
+	5X7H-758A-7H6D-5E73-6L88	0 (2)	24Apr2020
+	1K2N-4D3D-7F4A-0Q9N-1087	0 (3)	20Mar2020
+	DF6K-3L4B-5E76U-5Q8A-5E9U	0 (0)	15Jan2020
+	7J7L8-4384-44823-12498-020P	0 (1)	14Jan2020

Add an additional Certificate Number

New Certificate Number:

eg: A1234-B5678-C0912-D3456

Add New Certificate Number Now

Figure 5: Certificate Numbers section

Each certificate is composed of one or more licenses. The Available column shows both the number of available licenses (those that have not yet been activated) and the total number of licenses related to the certificate (shown in parenthesis). By expanding a specific certificate you can see the license information as shown in Figure 6:

- Item ID: A unique ID that identifies the product option.
- Name: A detailed explanation of the licensed product.
- License Container: A number that identifies the computer where the license is installed. This field is empty until the license is activated.
- Status: Specifies whether the license is Available or Activated.

3. Navigating the License Manager

+ Certificate Number		Available	Purchased On
+ 00000-00000-00000-00000-00000		0 (4)	03Jul2020
- 00000-00000-00000-00000-00000		0 (2)	03Jun2020
Item ID	Name	License Container	Status
N5991-85011(SW)	N5991PA3A-1TP: PCIe Link EQ Test Support Add-on	130-3378749736	Activated
N5991-85017(SW)	N5991PB4A-1TP: PCIe Gen4 Receiver Test Base Spec	130-3378749736	Activated

Figure 6: License Information

The first time you go to this page, the list will only contain the certificate that was used to create the account. Then you can add more certificates as described in the Add New Certificate Number section.

To activate available licenses, continue to the section License Activation.

Products

The My Products view shows you the list of products related to the certificate numbers available on your account.

My Products		
Here you can see your activated products.		
+ Products	Description	Purchased On
+ N5991MC2A-1TP(SW)	N5991MC2A-1TP: C-PHY 2.0 Receiver Test	03Jul2020
+ AE6910RALL-1FP(SW)	AE6910RALL-1FP: AE Bundle All Options	14May2020
+ N5990ADALL(SW)	N5990ADALL: DP Bundle All Options	28Apr2020

Figure 7: My Products section

By expanding a specific product you can see the following information:

- Host: The name of the host where the license is installed
- HostID: The ID of the host where the license is installed
- Qty: The number of licenses for that product
- Expiration: Indicates the expiration date, if one exists
- Maintenance: Indicates if the maintenance is included
- Certificate Number: The number of the certificate that contains that license
- Activated On: The date that the licensed was activated

Computers

The My Containers view shows you the list of containers related to the certificate numbers available on your account.

3. Navigating the License Manager

My License Containers

Here you can see your registered host PCs.

	License Container	Host	Purchased On
+	130-2278146736	827-99-143	03Jul2020

Figure 8: My Containers section

Each container can have one or more licenses transferred. By expanding a specific container you can see the list of activated licenses for that container:

- ItemID: A unique ID that identifies the product option
- Name: A longer explanation of the product
- Qty: The number of licenses for that product
- Expiration: Indicates the expiration date, if one exists
- Maintenance: Indicates if the maintenance is included
- Certificate Number: The number of the certificate that contains that license
- Activated On: The date that the licensed was activated

Auto Update

It can happen that, for some reason, the system administrator modifies a license (for example changes the maintenance period). To make that change effective it will be necessary to update the container of that license.

In the auto update section you can apply the existing license updates for a specific container.

4. Main License Tasks

Add New Certificate Number

If you have a new certificate you can easily add it from the portal:

1. Go to Certificate Numbers section (default view, see Figure 9)
2. In the “New Certificate Number” subsection, insert the certificate number.
3. Click on **Add New Certificate Number Now**

If everything is OK, the certificate will be added to the certificate list

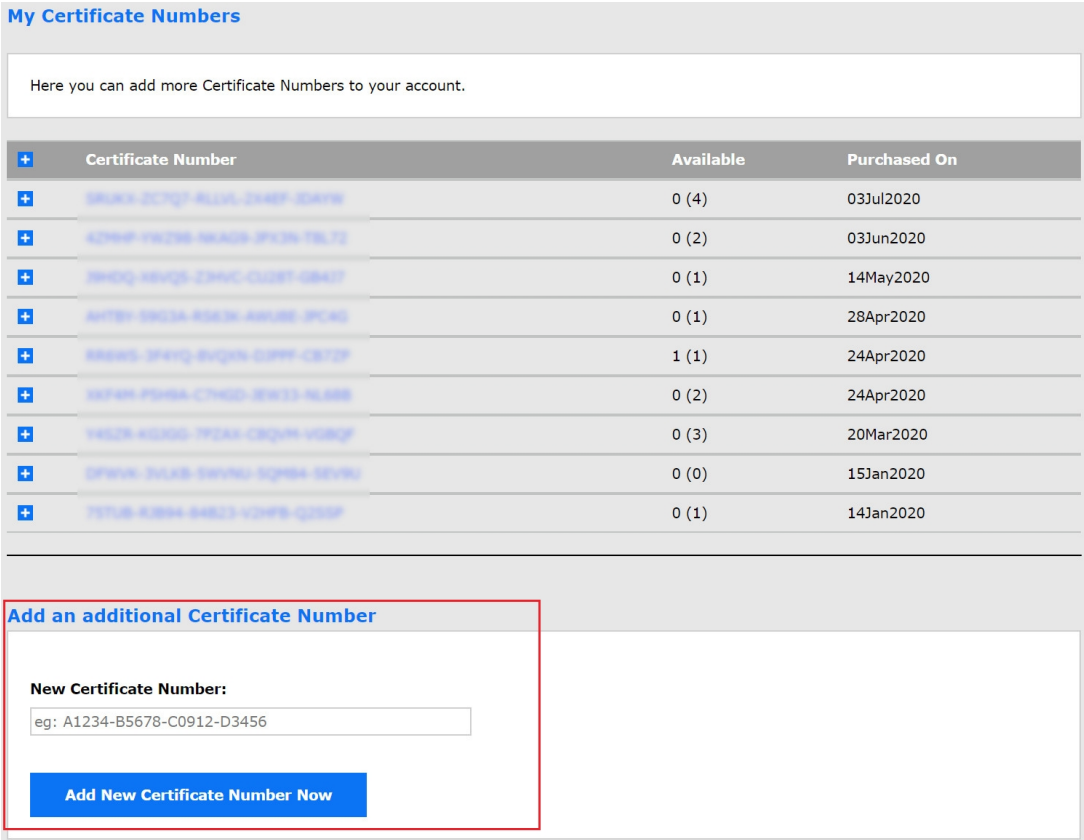


Figure 9: Add New Certificate Number

License Activation

There are two ways of activating a license:

- Direct License Transfer
- File-based License Transfer

NOTE: Before activating a specific license, make sure that the products related to that license are already installed on the controller PC (refer to Downloading and Installing the Software). If they are not installed you will get some error messages and the activation will not work.

Direct License Transfer

This is the easier way. It requires the controller PC where you want to activate the license to have internet access. Then you must access the portal on that PC and perform the following steps:

1. Go to Certificate Numbers section (see Figure 10).
2. Click on the certificate with the licenses to be activated (see Figure 10).

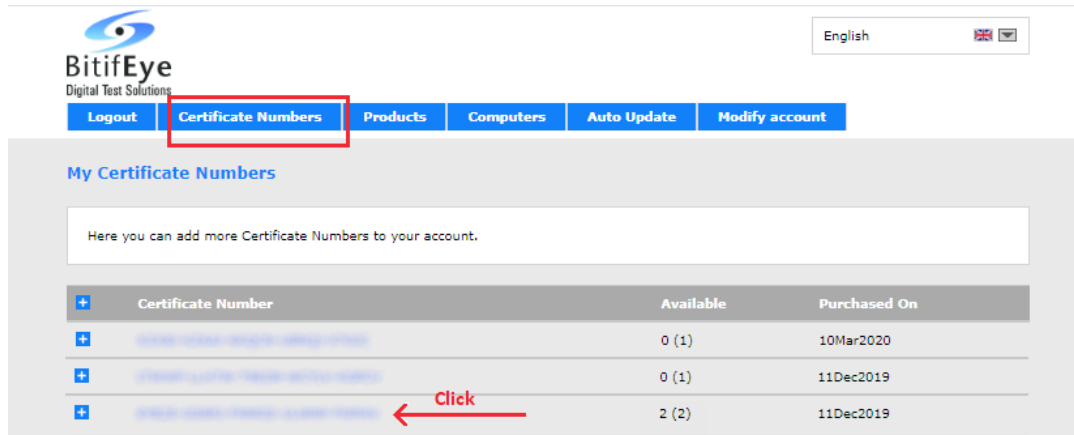


Figure 10: License Activation - Direct License Transfer – (I)

3. You will be redirected to My Licenses view (Figure 11). In this view (same as in My Certificate Numbers view) you can see the details of the licenses for that certificate.
4. Click on the **Activate Licenses** button (Figure 11).

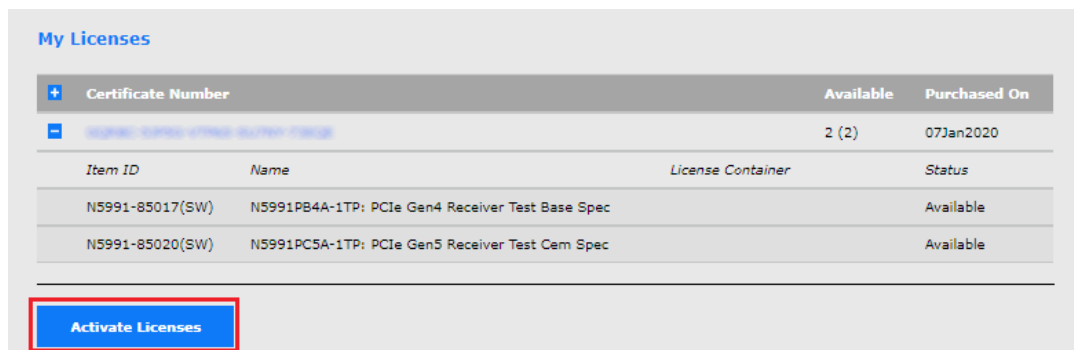


Figure 11: License Activation - Direct License Transfer – (II)

5. Then, in the Available Licenses view (Figure 12), you can individually select the licenses you want to activate (by default all the available items are selected).
6. Select the locally connected Container to which you want to transfer the licenses (Figure 12).
7. Finally click on **Activate Selected Licenses Now** (Figure 12).

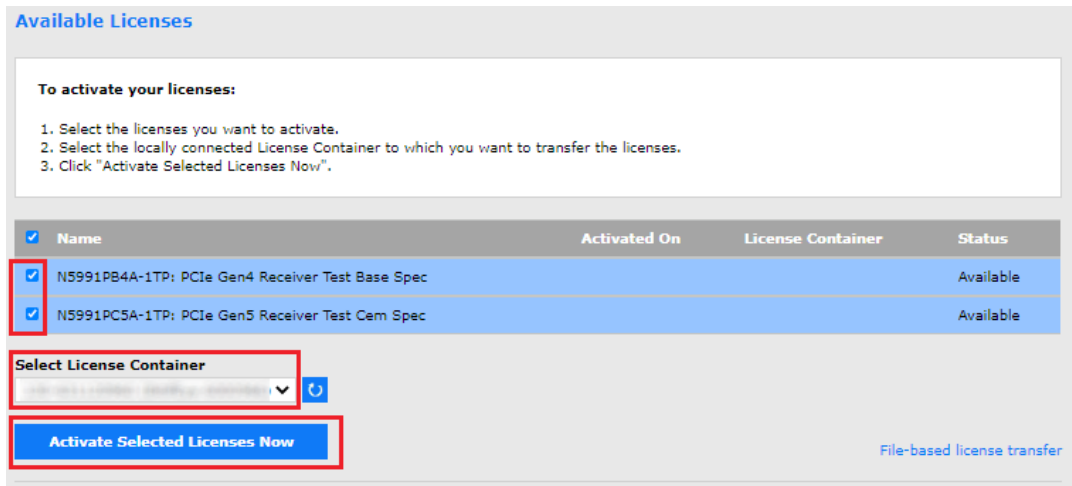


Figure 12: License Activation - Direct License Transfer – (III)

If everything is OK, the licenses will be activated

File-based License Transfer

If the controller PC where you want to install the license does not have internet access, you must transfer the license using the file-based method.

In this case, you need access to the portal from a non-controller PC (with internet access).

In the PC with internet, go to the license portal and perform the following steps:

1. Go to Certificate Numbers section (see Figure 13).
2. Click on the certificate with the licenses to be activated (see Figure 13)..

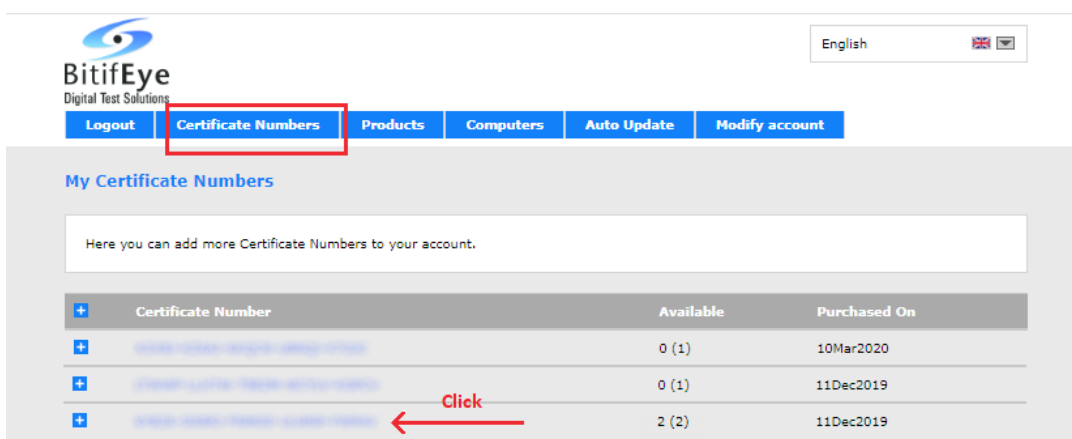


Figure 13: License Activation – File-based License Transfer – (I)

3. You will be redirected to My Licenses view (Figure 14).
4. Click on the **Activate Licenses** button (Figure 14).

4. Main License Tasks

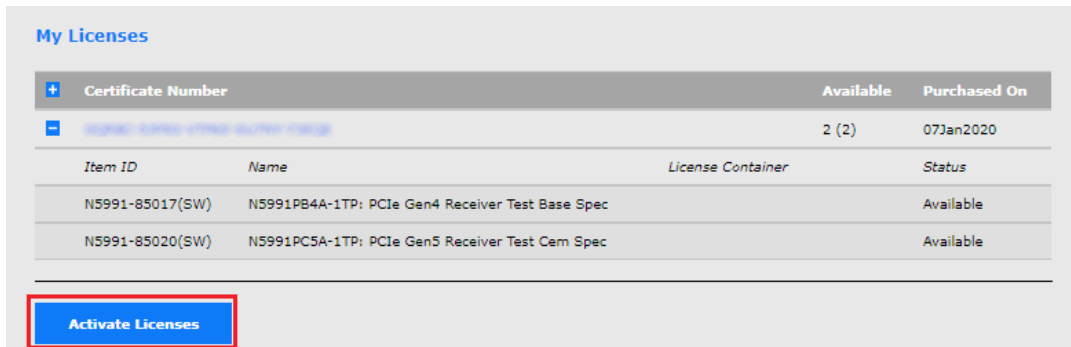


Figure 14: License Activation - File-based License Transfer – (II)

5. Then, in the Available Licenses view, change the transfer mode by selecting the **File-based license transfer** option (see Figure 15 and Figure 19).

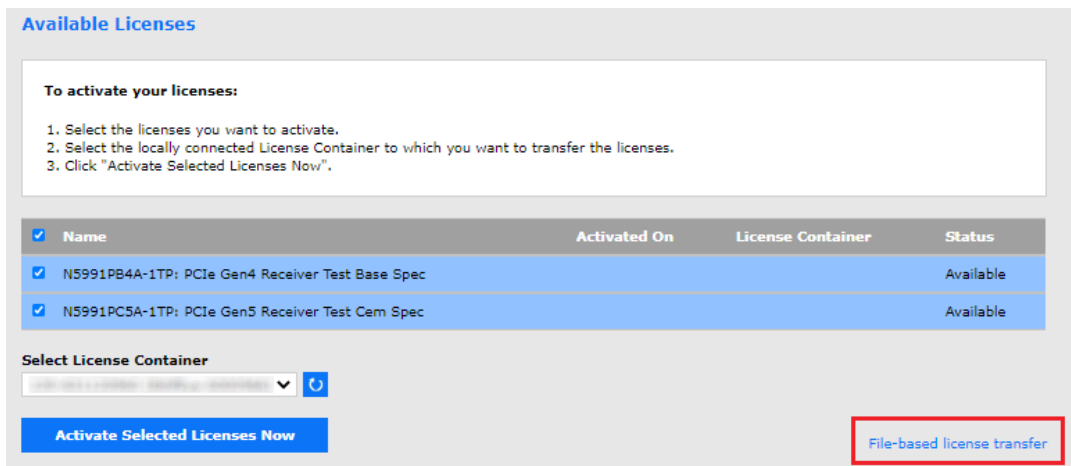


Figure 15: License Activation - File-based License Transfer – (III)

At this point, in the offline controller PC (where you want to install the license), continue with the following steps:

6. Create a license request file
 - 6.1. Start the CodeMeter Control Center. To download the software refer to CodeMeter Control Center section.
 - 6.2. Select the License Container (Figure 16)

NOTE: The computer where the license is going to be installed needs to have a specific container for the N5591 products (Bitifeye 6000966) and a specific container for the N5990A products (Bitifeye 6000961), as shown in Figure 16. If the computer does not yet have those containers you can use the template available on the BitifEye License portal (in the upload request section, see in Figure 19 highlighted in yellow). Drag the template file to CodeMeter Control Center.

If the containers have already been created DO NOT create more containers. Just select the existing ones.

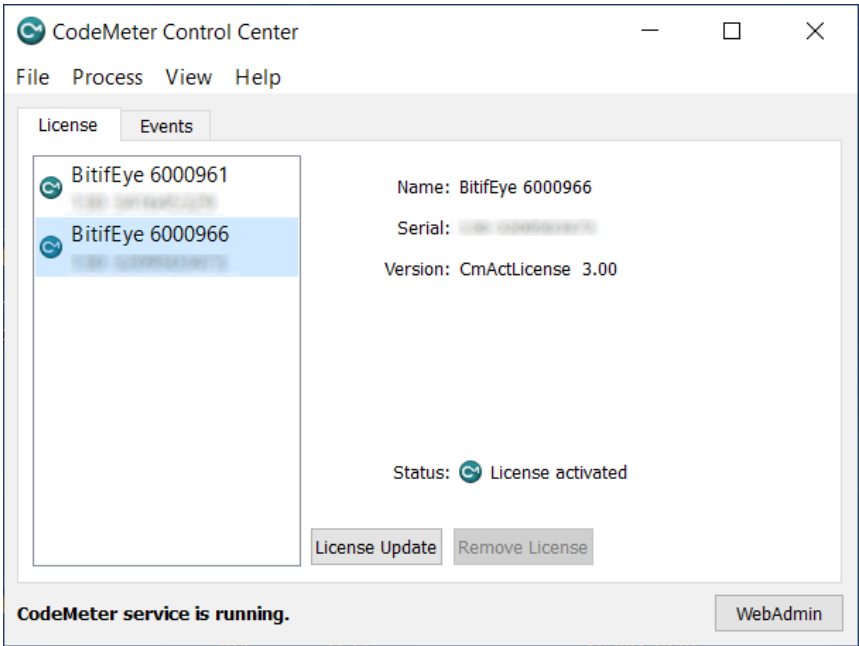


Figure 16: License Containers for N5990A and N5991

6.3. Click on **License Update** (see Figure 17).

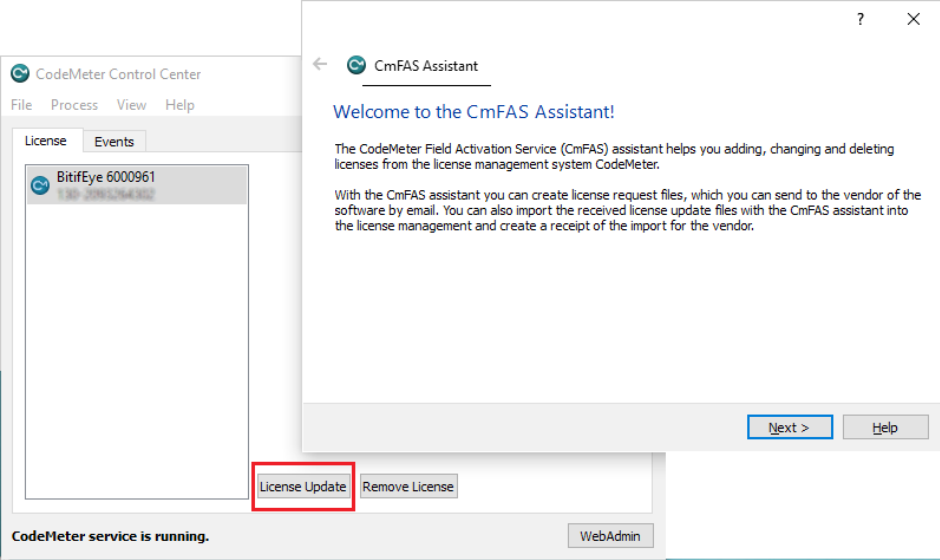


Figure 17: License Update

6.4. The "CmFAS Assistant" will open. Choose the option "Create license request" (Figure 18) and select the path to save it. Then click **Commit** to generate the license request file.

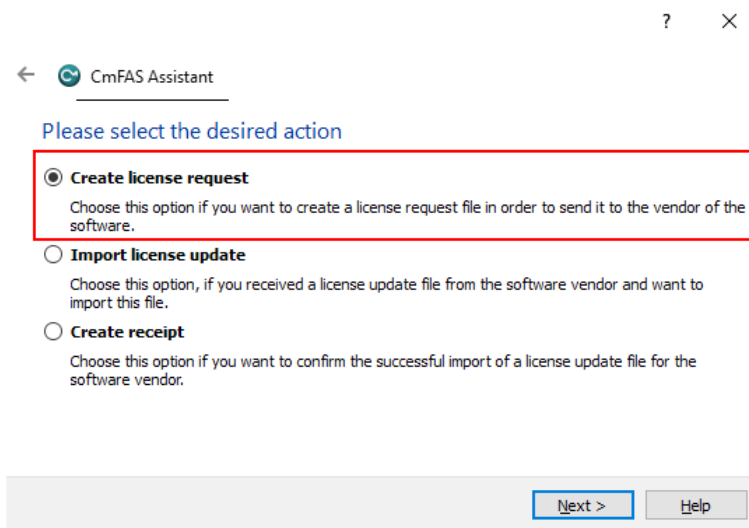


Figure 18: Create license request

7. Copy the license request file from the offline controller PC to the online PC connected to the portal.

Then, in the online PC, continue in the Available Licenses view:

8. Select the licenses you want to activate (see Figure 19).
9. Select the license request file (see Figure 19).
10. Click on **Upload Request And Continue Now** (see Figure 19).

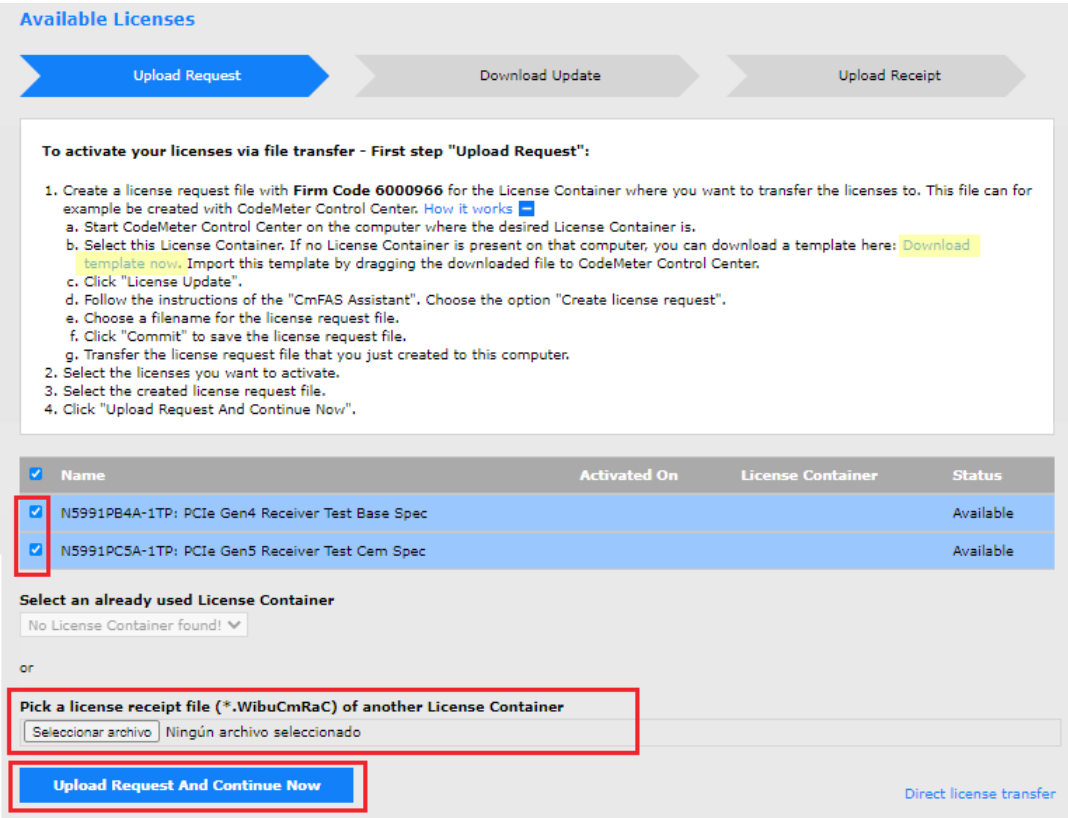


Figure 19: License Activation - File-based License Transfer – (IV)

11. In the Download License Update File view, click on the **Download License Update File Now** button to download the license update file (see Figure 20). Then click **Next** to go to the Confirm License Transfer view.

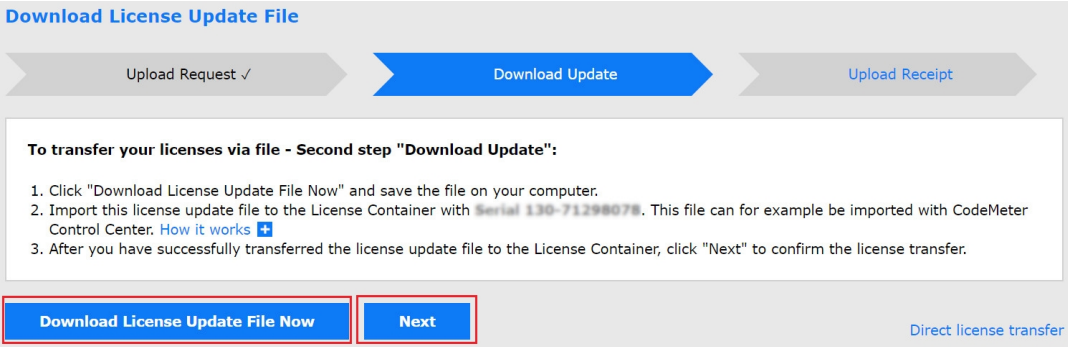


Figure 20: License Activation - File-based License Transfer – (V)

12. Copy the update license file to the offline controller PC.

Now in the offline controller PC:

13. Import License update.
 - 13.1. In the CodeMeter Control Center, select the License Container (Figure 16).
 - 13.2. Click on **License Update** (see Figure 17).

13.3. The “CmFAS Assistant” will open. Choose the option “Import license update” (Figure 21) and select the path where the license update file is saved. Then click **Commit** to apply the update.

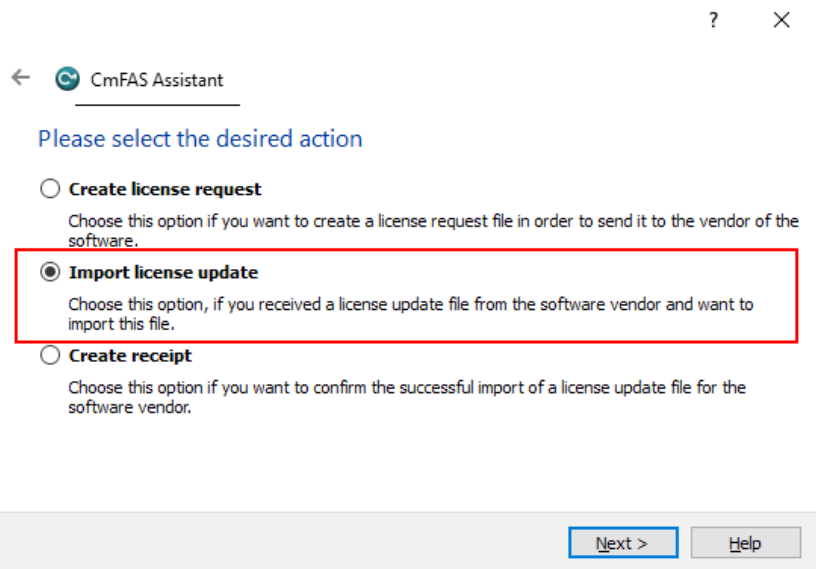


Figure 21: Import license update

13.4. Click on the **Next** button to confirm that the license was successfully updated.

14. Create a license receipt file

14.1. In the CodeMeter Control Center, select the License Container (Figure 16).

14.2. Click on **License Update** (see Figure Figure 17).

14.3. The “CmFAS Assistant” will open. Choose the option “Create receipt” (Figure 22) and select the path to store the receipt file. Then click **Commit** to create the file.

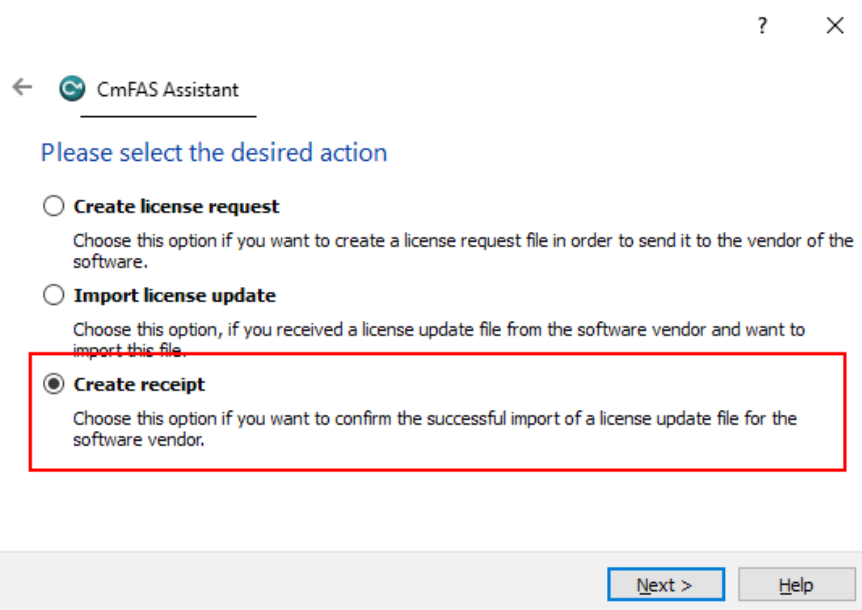


Figure 22: Create receipt

15. Copy that license receipt to the online PC connected to the portal.

Finally in the online PC, in the Confirm License Transfer view:

16. Select the license receipt (see Figure 23).

17. Click on **Upload Receipt Now** button (see Figure 23).

Confirm License Transfer

Upload Request ✓ Download Update **Upload Receipt**

To transfer your licenses via file - Third step "Upload Receipt":

1. Create a license receipt file from the License Container with **Serial 130-71298078** and **Firm Code 6000966**. This file can for example be created with CodeMeter Control Center. [How it works](#) +
2. Select the created license receipt file.
3. Click "Upload Receipt Now".

If you haven't imported the license update file yet, you can download it again. Click "Back" to get to the download page.

Pick license receipt file (*.WibuCmRaC)
Datei auswählen | Keine ausgewählt

Upload Receipt Now **Back** [Direct license transfer](#)

Figure 23: License Activation - File-based License Transfer – (VI)

If everything is OK the license transfer process has been finished successfully.

License Transfer

There are two types of licenses: Fixed and Transportable.

A fixed license cannot be transferred from one PC to another after it has been activated. On the other hand, a transportable license can be deactivated on one PC and then activated on another.

There are two ways of deactivating a license (same as for activation):

- Direct License Transfer
- File-based License Transfer

Once the license is deactivated, it can be activated on the desired PC (see License Activation).

Direct License Transfer

This requires the controller PC where you want to deactivate the license to have internet access. Then you must access the portal on that PC and perform the following steps:

1. Go to My Certificate Numbers section (default view, see (see Figure 24).
2. Click on the certificate number with the licenses to be transferred (see Figure 24).

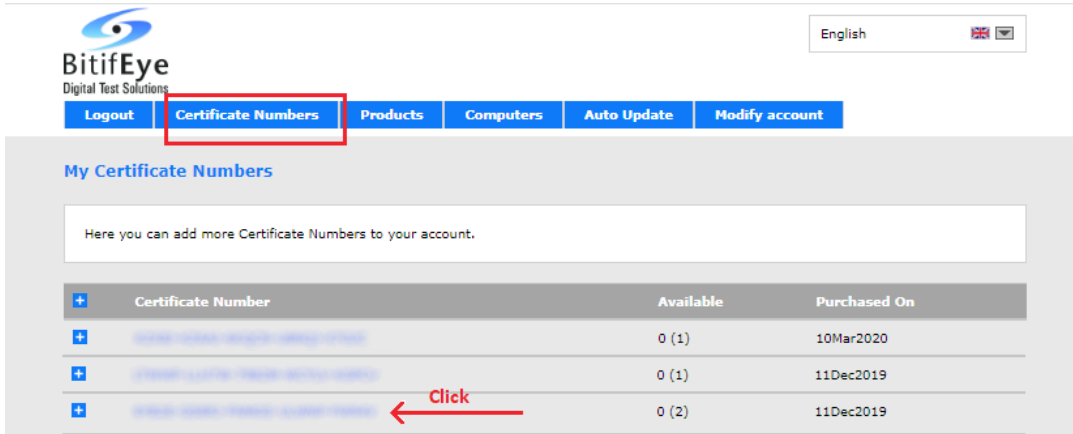


Figure 24: Re-Host License - Direct License Transfer – (I)

- 3. You will be redirected to My Licenses view (Figure 25).
- 4. Click on the **Re-Host Licenses** button (Figure 25).

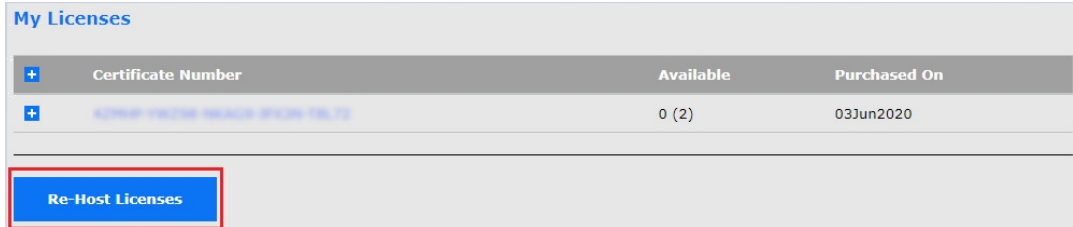


Figure 25: Re-Host License - Direct License Transfer – (II)

- 5. Then, in the Re-Host Licenses view (Figure 26), you can select the licenses you want to deactivate.
- 6. Finally, click on **Deactivate Selected Licenses Now**.

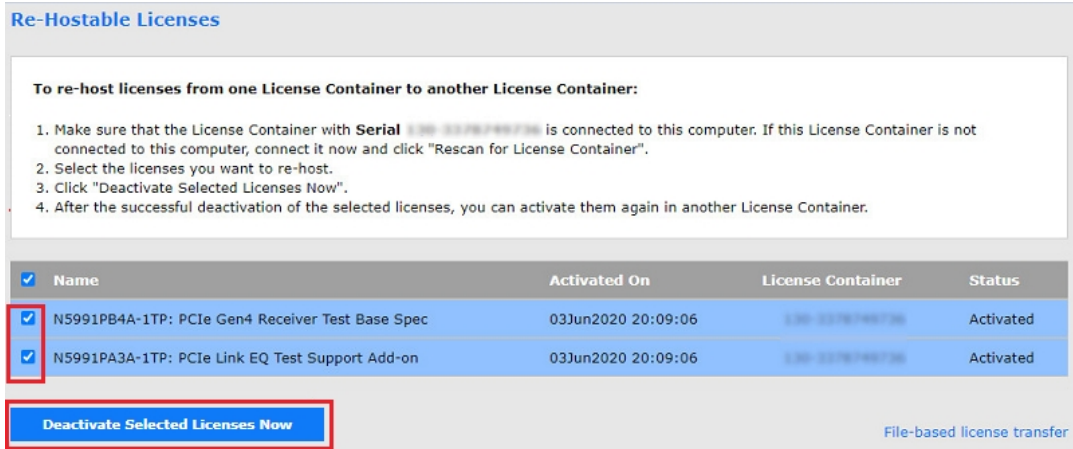


Figure 26: Re-Host License - Direct License Transfer – (III)

If everything is OK, the licenses will be deleted from the PC where they were installed, and then they will be available again to be installed on another PC.

File-based License Transfer

If the controller PC where you want to deactivate the license does not have internet access, you must transfer the license using the file-based method.

In this case, you need access to the portal from a non-controller PC (with internet access).

In the PC with internet, go to the license portal and perform the following steps:

1. Go to My Certificate Numbers section (default view, see (see Figure 27).
2. Click on the certificate number with the licenses to be transferred (see Figure 27).

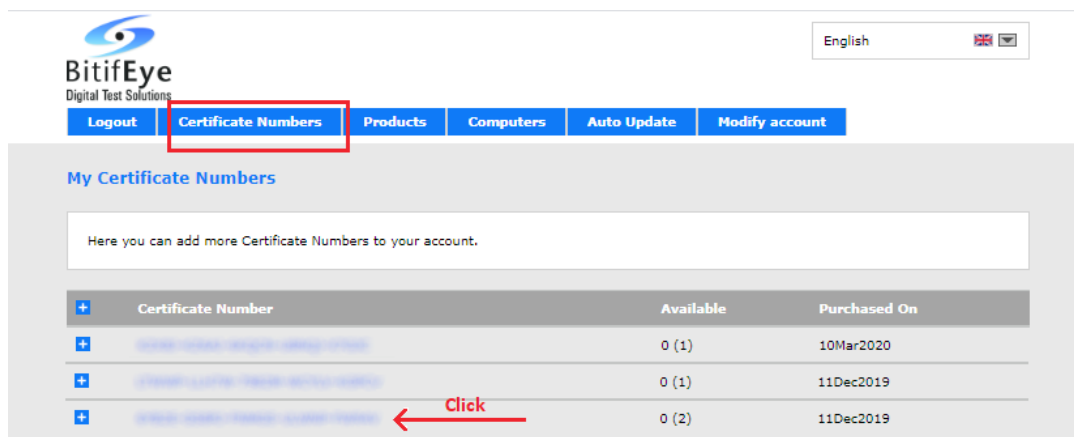


Figure 27: Re-Host License - File-based License Transfer – (I)

3. You will be redirected to My Licenses view (Figure 28).
4. Click on the **Re-Host Licenses** button (Figure 28).

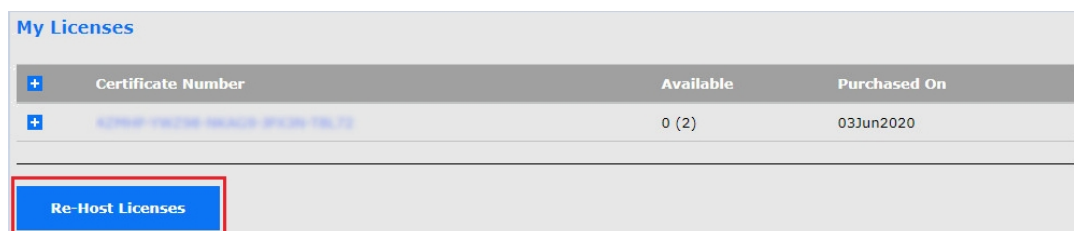


Figure 28: Re-Host License - File-based License Transfer – (II)

5. Then, in the Re-Hostable Licenses view, change the transfer mode by selecting the **File-based license transfer** option (see Figure 29).

Re-Hostable Licenses

To re-host licenses from one License Container to another License Container:

1. Make sure that the License Container with **Serial** **1.00-3278746726** is connected to this computer. If this License Container is not connected to this computer, connect it now and click "Rescan for License Container".
2. Select the licenses you want to re-host.
3. Click "Deactivate Selected Licenses Now".
4. After the successful deactivation of the selected licenses, you can activate them again in another License Container.

<input checked="" type="checkbox"/>	Name	Activated On	License Container	Status
<input checked="" type="checkbox"/>	N5991PB4A-1TP: PCIe Gen4 Receiver Test Base Spec	03Jun2020 20:09:06	1.00-3278746726	Activated
<input checked="" type="checkbox"/>	N5991PA3A-1TP: PCIe Link EQ Test Support Add-on	03Jun2020 20:09:06	1.00-3278746726	Activated

Deactivate Selected Licenses Now

File-based license transfer

Figure 29: Re-Host License - File-based License Transfer – (III)

At this point, in the offline controller PC (where you want to install the license), continue with the following steps:

6. Create a license request file
 - 6.1. Start the CodeMeter Control Center. To download the software refer to CodeMeter Control Center section.
 - 6.2. Select the License Container (Figure 16)
 - 6.3. Click on **License Update** (see Figure 17).
 - 6.4. The "CmFAS Assistant" will open. Choose the option "Create license request" (Figure 18) and select the path to save it. Then click **Commit** to generate the license request file.
7. Copy the license request file from the offline controller PC to the online PC connected to the portal.

Then, in the online PC, continue in the Re-Hostable Licenses view:

8. Select the licenses you want to re-host (see Figure 30).
9. Select the license request file (see Figure 30).
10. Click on **Upload Request And Continue Now** (see Figure 30).

Re-Hostable Licenses

Upload Request Download Update Upload Receipt

When re-hosting licenses, they will be deactivated first. Then they can be activated in another License Container. This page guides you through the deactivation process. Only after successfully deactivating the licenses, can you activate these licenses again.

To re-host licenses from one License Container to another License Container via file transfer: - First step "Upload Request":

1. Create a license request file from the License Container with **Serial** 130-3378749736 and **Firm Code** 6000966. This file can for example be created with CodeMeter Control Center. [How it works](#) +
2. Select the licenses you want to re-host.
3. Select the created license request file.
4. Click "Upload Request And Continue Now".

<input checked="" type="checkbox"/>	Name	Activated On	License Container	Status
<input checked="" type="checkbox"/>	N5991PB4A-1TP: PCIe Gen4 Receiver Test Base Spec	03Jun2020 20:09:06	130-3378749736	Activated
<input checked="" type="checkbox"/>	N5991PA3A-1TP: PCIe Link EQ Test Support Add-on	03Jun2020 20:09:06	130-3378749736	Activated

Pick license request file (*.WibuCmRaC)

Upload Request And Continue Now Direct license transfer

Figure 30: Re-Host License - File-based License Transfer – (IV)

11. In the Download License Update File view, click on the **Download License Update File Now** button to download the license update file (see Figure 31). Then click **Next** to go to the Confirm License Transfer view.

Download License Update File

Upload Request ✓ Download Update Upload Receipt

To transfer your licenses via file - Second step "Download Update":

1. Click "Download License Update File Now" and save the file on your computer.
2. Import this license update file to the License Container with **Serial** 130-71298078. This file can for example be imported with CodeMeter Control Center. [How it works](#) +
3. After you have successfully transferred the license update file to the License Container, click "Next" to confirm the license transfer.

Download License Update File Now **Next** Direct license transfer

Figure 31: Re-Host License - File-based License Transfer – (V)

12. Copy the update license file to the offline controller PC.

Now in the offline controller PC:

13. Import License update.
 - 13.1. In the CodeMeter Control Center, select the License Container (Figure 16).
 - 13.2. Click on **License Update** (see Figure 17).
 - 13.3. The "CmFAS Assistant" will open. Choose the option "Import license update" (Figure 21) and select the path where the license update file is saved. Then click Commit to apply the update.
 - 13.4. Click on the **Next** button to confirm that the license was successfully updated.

4. Main License Tasks

14. Create a license receipt file

- 14.1. In the CodeMeter Control Center, select the License Container (Figure 16).
- 14.2. Click on **License Update** (see Figure 17).
- 14.3. The “CmFAS Assistant” will open. Choose the option “Create receipt” (Figure 22) and select the path to store the receipt file. Then click **Commit** to create the file.

15. Copy that license receipt to the online PC connected to the portal.

Finally in the online PC, in the Confirm License Transfer view:

16. Select the license receipt (see Figure 23).
17. Click on **Upload Receipt Now** button (see Figure 23).

Confirm License Transfer

Upload Request ✓ Download Update **Upload Receipt**

To transfer your licenses via file - Third step "Upload Receipt":

1. Create a license receipt file from the License Container with Serial 130-71298078 and Firm Code 6000966. This file can for example be created with CodeMeter Control Center. [How it works](#) +
2. Select the created license receipt file.
3. Click "Upload Receipt Now".

If you haven't imported the license update file yet, you can download it again. Click "Back" to get to the download page.

Pick license receipt file (*.WibuCmRaC)

Datei auswählen | Keine ausgewählt

Upload Receipt Now Back

Direct license transfer

Figure 32: Re-Host License - File-based License Transfer – (VI)

If everything is OK, the license deactivation process has been finished successfully.

5. Additional License Tools

CodeMeter Control Center

The CodeMeter software can be used as a complementary tool for license management. You can download it here: <https://www.bitifeye.com/download-n5991/> (CodeMeter User Runtime for Windows).

This software is especially useful for the File-based License Transfer method. It provides the following features:

- Create a License Request
- Update a License File
- Create a License Receipt

6. Downloading and Installing the Software

Before activating a license on a controller PC, it is necessary that the related software is already installed on that PC.

Download the Software

The N5990 and N5991 installers can be found at the download section of the BitfiEye portal: <https://www.bitfeye.com/download/>. Here you can select several options:

- Bitifeye License Manager
- N5990A Software
- N5991 Software
- Instruments Manuals & Firmware

Click on N5990A or N5991 Software to see the list of all the available products for these solutions. Then by selecting the desired product, one or more download links will be available.

Figure 33 shows how to download the N5991 PCIe software. In this case, for PCIe there are four items available: N5991 ValiFrame PCI Express, VFSeasim software (required for Rx testing) and N5991 PCI Express Link Training Suite.

N5991 TEST AUTOMATION SOFTWARE

BitfiEye Licensing Manager (BLM)

PCI Express

CCIX

USB 3.2

USB4

HDMI 2.1

MIPI C-PHY

PCI SIG

N5991PB5A	N5991PC5A	N5991PL5A	N5991PA3-ADD
PCI Express Gen 5.0 Receiver Test, Base Spec	PCI Express Gen 5.0 Receiver Test, CEM Spec	PCI Express Gen 5.0 Link Training Suite	PCI Express Link EQ Test Support
for M8040A	for M8040A	for M8040A	for Oscilloscopes and M8040A/M8020A
N5991PB4A	N5991PC4A	N5991PL4A	N5991PU4A
PCI Express Gen 4.0 Receiver Test, Base Spec	PCI Express Gen 4.0 Receiver Test, CEM Spec	PCI Express Gen 4.0 Link Training Suite	PCI Express Gen 4.0 U.2 Receiver Test
for M8040A/M8020A	for M8040A/M8020A	for M8040A/M8020A	for Oscilloscopes and M8040A/M8020A

Download: ValiFrame N5991 PCI Express 2.08 (2020-06-15) changelog

Download: VFSeasim Installer 0.78.0 (2020-03-05) required for 32 GT/s calibration

Download: VFSeasim Installer 0.74.0_2 (2019-07-18) required for 8 and 16 GT/s calibration

Download: N5991 PCI Express Link Training Suite 1.00 (2019-11-20) changelog

Related Manuals:

N5991 PCIe Rx Tests User Guide

N5991 PCIe LTS User Guide

N5991 PCIe LTS Language Guide

Figure 33: Download the software

Install the Software

To install a product just execute the corresponding installer and follow the steps of the installer wizard.

As an example, Figures Figure 34–Figure 37 show the installation of the N5991 ValiFrame PCIe product.

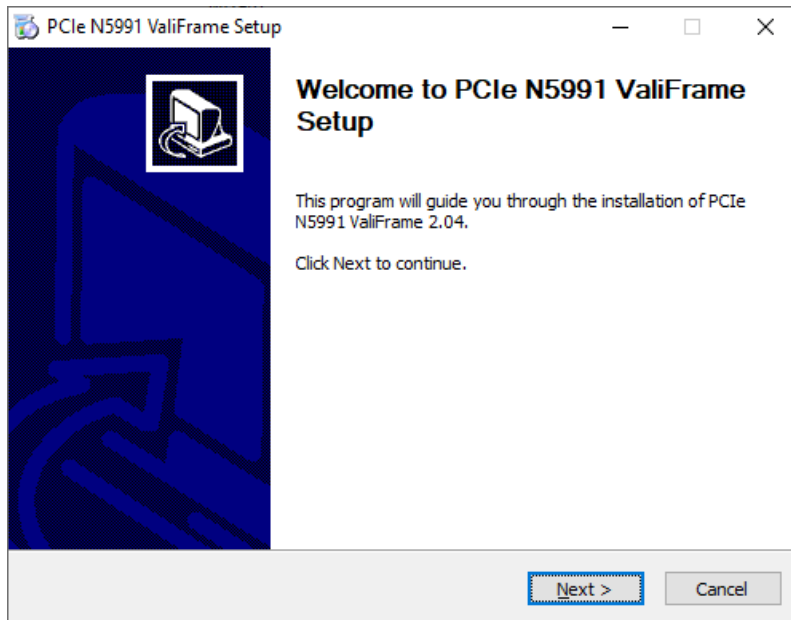


Figure 34: Installer Welcome Setup Window

The second page of the installer wizard will show the software license agreement (see Figure Figure 35). Read it carefully and select “I accept the terms of the License Agreement” option. Then, click on **Next** to continue.

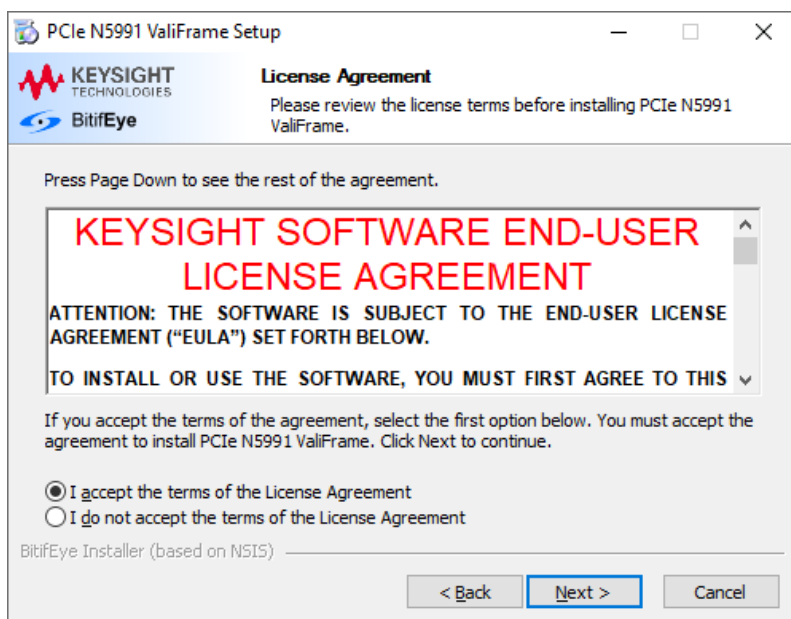


Figure 35: Installer License Agreement Window

6. Downloading and Installing the Software

After the **Next** button has been pressed, the Choose Components window is displayed as shown in Figure Figure 36. Select the “Full” option to install the default setup or “Custom” for custom installation. Then, click on **Next** to continue.

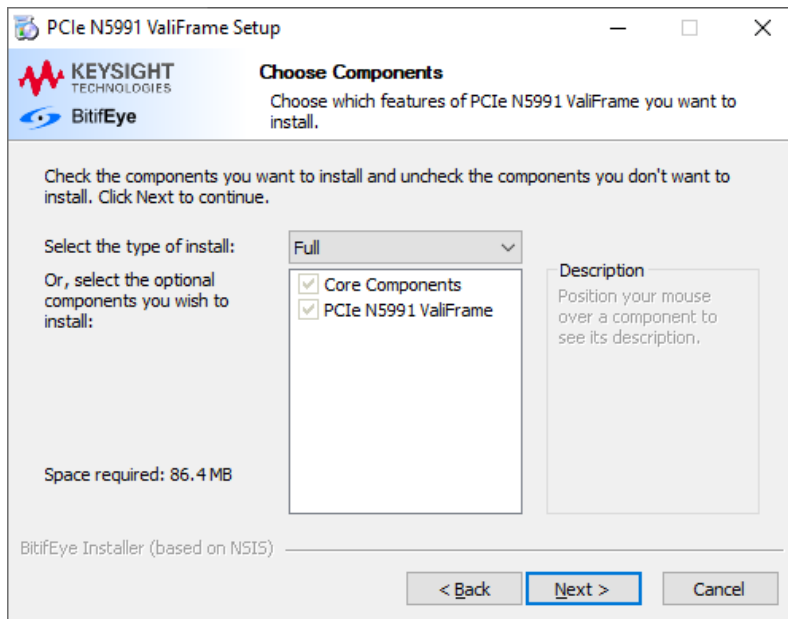


Figure 36: Installer Choose Components Window

The Choose Install Location window is displayed as shown in Figure Figure 37. Click the **Browse...** button to select the destination folder in which the software is to be installed. Finally, click the **Install** button to install the software.

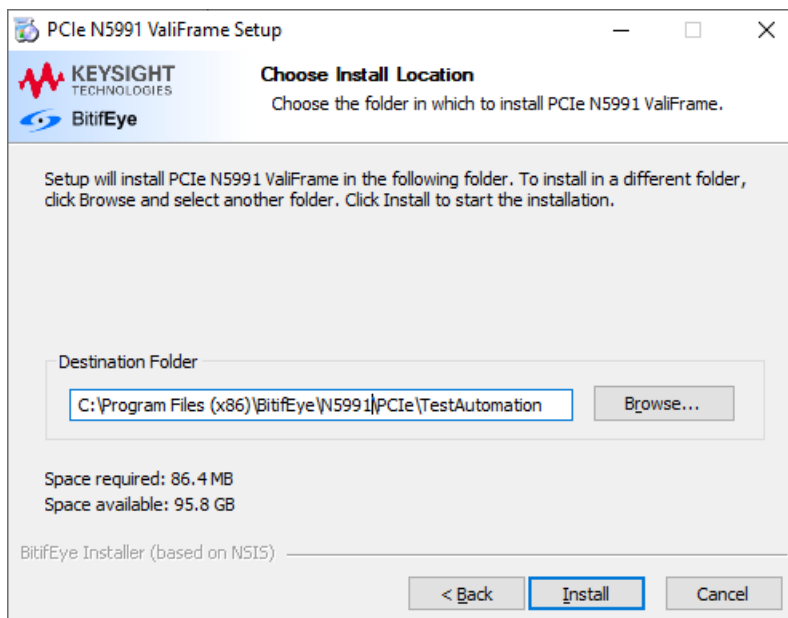


Figure 37: Installer Choose Location Window